



KIT CHAIN COVER NC700



46000H0612VN

- 1 - Carter
- 2 - Cover
- 3 - Fixing Plate
- 4 - Elastic strip
- 5 - Screw UNI 7687 M4x10
- 6 - Screw ISO 7380 M5x20
- 7 - Washer UNI 6592 M4



- 1) Svitare le due viti e rimuovere la protezione catena originale.
- 2) Fissare la piastrina di fissaggio al forcellone nell'attacco (A).
- 3) Installare il carter, facendolo scorrere finché i fori coincidono con i punti di fissaggio (A) e (B), quindi avvitare.
- 4) Fissare la fascetta elastica di sicurezza attorno al forcellone.
- 5) Fissare il cover, utilizzando i fissaggi a pressione.
- 6) Bloccare li cover con la vite di sicurezza posteriore.



- 1) Unscrew and remove the original chain protector.
- 2) Install the fixing plate to the swing-arm fixing point (A).
- 3) Install the cowl, sliding until the holes match with the two fixing points (A) and (B), then fasten it with the screws.
- 4) Fasten the elastic strip around the swing-arm.
- 5) Install the cover using the snap-in fasteners.
- 6) Secure the cover with the locking screw on the back.

