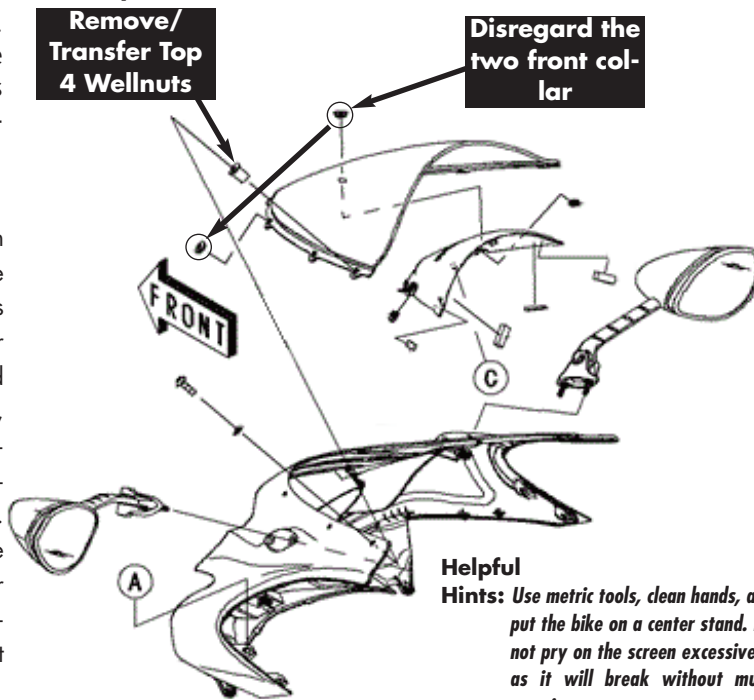


PLEASE READ BEFORE MOUNTING YOUR WINDSCREEN
Mounting Instructions for ZX-14R / ZZR1400 2006-Present

Thank you for purchasing a Zero Gravity's windscreen. This instruction sheet will provide an in-depth look at the installation process. To receive further assistance or parts please call Zero Gravity® at 805-388-8803 or e-mail: tech-info@zerogravity-racing.com.

Mounting Your Zero Gravity Windscreen

Remove both the mirror fasteners located under each mirror. Remove both mirrors. Remove the 6 screws holding the windscreen in place. Remove the windscreen by pulling to the rear. Remove the 4 rear Well Nut fasteners from the factory windscreen and insert them into the 4 rear holes of your Zero Gravity windscreen. If the original fasteners are unusable or bulged to the point where they cannot be re-inserted into your new windscreen, use new Well Nut fasteners. For 2013 and newer models, the two forward holes in the factory windscreen will have plastic inserts. Do not attempt to remove them and insert them into your Zero Gravity windscreen. Your Zero Gravity windscreen is designed to function without inserts in the front two holes. To install your new windscreen, insert it between the inner and outer fairing layers exactly as the factory windscreen had been installed. Insert the 6 screws and tighten them snugly being very careful not to over-tighten.


WWW.ZEROGRAVITY-RACING.COM

Helpful


Hints: Use metric tools, clean hands, and put the bike on a center stand. Do not pry on the screen excessively, as it will break without much warning.

PLEASE READ BEFORE MOUNTING YOUR WINDSCREEN
Mounting Instructions for ZX-14R / ZZR1400 2006-Present

Thank you for purchasing a Zero Gravity's windscreen. This instruction sheet will provide an in-depth look at the installation process. To receive further assistance or parts please call Zero Gravity® at 805-388-8803 or e-mail: tech-info@zerogravity-racing.com.

Mounting Your Zero Gravity Windscreen

Remove both the mirror fasteners located under each mirror. Remove both mirrors. Remove the 6 screws holding the windscreen in place. Remove the windscreen by pulling to the rear. Remove the 4 rear Well Nut fasteners from the factory windscreen and insert them into the 4 rear holes of your Zero Gravity windscreen. If the original fasteners are unusable or bulged to the point where they cannot be re-inserted into your new windscreen, use new Well Nut fasteners. For 2013 and newer models, the two forward holes in the factory windscreen will have plastic inserts. Do not attempt to remove them and insert them into your Zero Gravity windscreen. Your Zero Gravity windscreen is designed to function without inserts in the front two holes. To install your new windscreen, insert it between the inner and outer fairing layers exactly as the factory windscreen had been installed. Insert the 6 screws and tighten them snugly being very careful not to over-tighten.

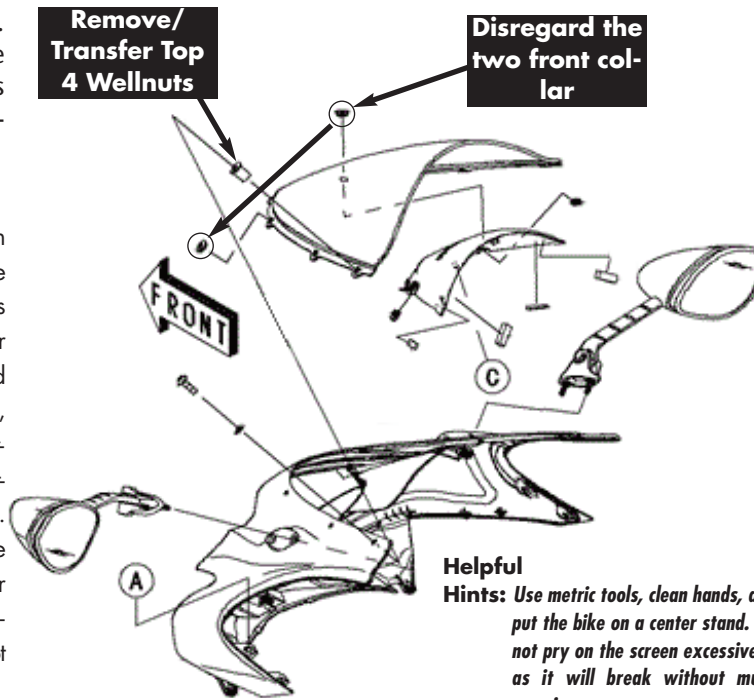
WWW.ZEROGRAVITY-RACING.COM

Helpful

Hints: Use metric tools, clean hands, and put the bike on a center stand. Do not pry on the screen excessively, as it will break without much warning.